

WakeBlaster.com


Ballast Timer Removal Instructions

To remove the factory ballast timer module from your boat, please follow these instructions:

1. Locate the ballast timer module. In many boats it is located under the rear port-side seat. It is a plastic or metal panel with 3 breaker switches.
2. Remove the timer module. It is secured with phillips head screws.




3. Remove the control cable plug

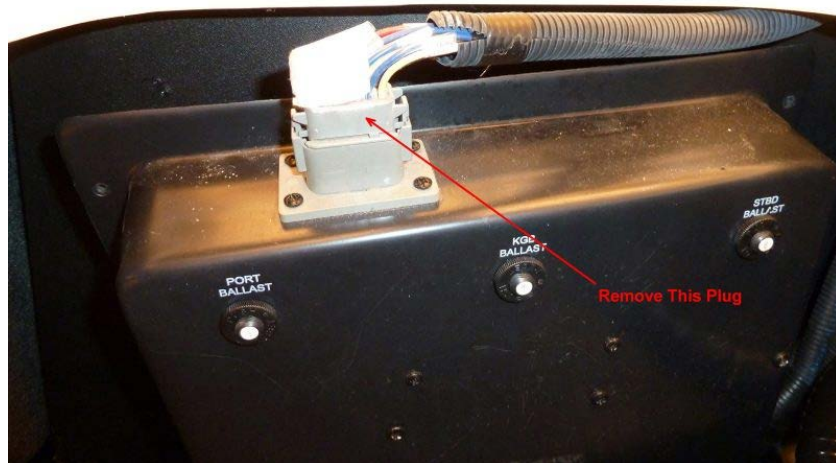

4. Disconnect the power cables to the module. Cover them with electrical tape, or disconnect them from the battery.



5. Disconnect the 3 pairs of blue and orange pump power cables. Some boats have plugs that connect these cables to bottom of the module. Some boats have bullet connectors on these cables. You may have to cut the wires and reconnect them with wire nuts. Label the wires so you can reconnect them correctly.

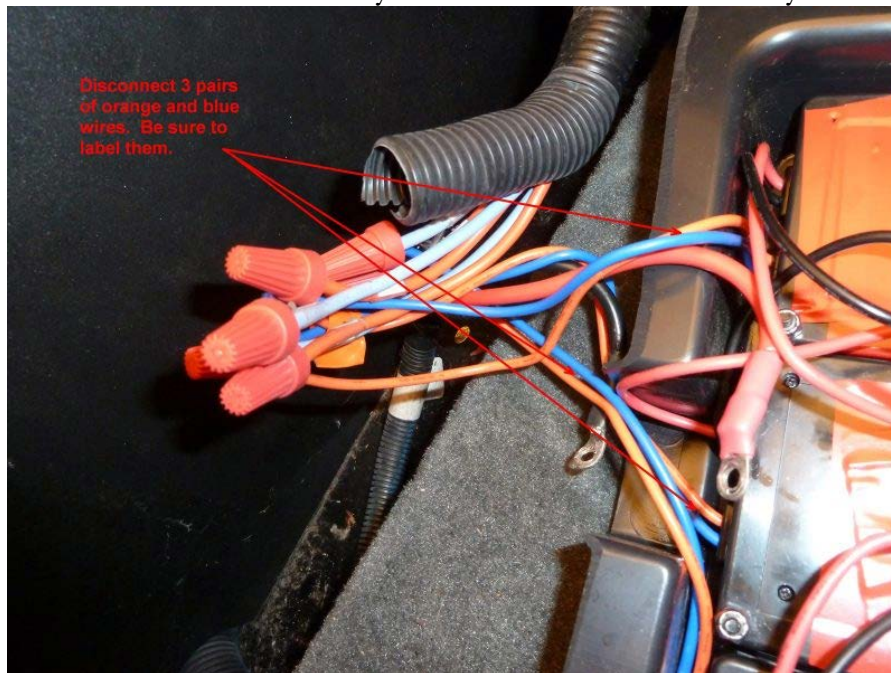

Removed ballast controller module.



Shipping the controller for reprogramming

Please ship the removed controller to:

WakeBlaster
4743 NW Jeanice Pl.
Corvallis, OR 97330

Please include a note with the controller with your return address and any special instructions such as desired run-time settings. Your controller will be reprogrammed and promptly returned via priority mail.